

Printer Manufacture	Printer Model	Type of Printer	Printer Server Model			
			PS-2101	PAN1001	DWP-1000	DWP-2000
			PUN-2001			DWP-2010
			1U	1P	1U	1U
HP	Business InkJet 1000	USB2.0	OK		OK	OK
HP	Color Laserjet 1500L	USB2.0	OK		OK	OK
HP	Color Laserjet 1600	GDI (USB)	OK		OK	OK
HP	Color Laserjet 2500	Parallel/USB (PCL6/5C)	OK	OK	OK	OK
HP	Color LaserJet 2550	PCL6/PS level 3 (USB)	OK	OK	OK	OK
HP	Color LaserJet 2550L/LN	PCL6/PS level 3 (USB)	OK		OK	OK
HP	Color LaserJet 2600	USB2.0	OK		OK	OK
HP	Color LaserJet 2605	PCL6/5E(USB)	OK	OK	OK	OK
HP	Color LaserJet 2700n	USB2.0	OK		OK	OK
HP	Color LaserJet 2840	USB2.0	OK		OK	OK
HP	Color LaserJet 3700	PCL6/5C(USB,Parallel)	OK	OK	OK	OK
HP	Color LaserJet 4000	Parallel		OK		
HP	Color LaserJet 4100	Parallel		OK		
HP	Color LaserJet 4500	Parallel		OK		
HP	Color Laserjet 4650	Install PCL Driver	OK	OK	OK	OK
HP	Color LaserJet 8550	Parallel (PCL5C)		OK		
HP	Color Laserjet CP1215	USB	OK		OK	OK
HP	Color Laserjet CP1525nw	USB	OK			OK
HP	Color Laserjet CM1312 MFP	USB	OK		OK	OK
HP	Color Laserjet CM1015 MFP	USB	OK		OK	OK
HP	Designjet 100	Parallel/USB	OK	OK	OK	OK
HP	Designjet 600	Parallel		OK		

HP	Designjet 650C	Parallel		OK		
HP	Designjet 700	Parallel		OK		
HP	Designjet 750C+	Parallel		OK		
HP	DeskJet 1120C	Parallel (PCL3)		OK		
HP	Deskjet 1125C	Parallel/USB (PCL3)	OK	OK	OK	OK
HP	Deskjet 1180C	Parallel/USB	OK	OK	OK	OK
HP	DeskJet 1280	PCL3(USB/Parallel)	OK	OK	OK	OK
HP	Deskjet 2000 J210		OK		OK	OK
HP	Deskjet 2050	USB2.0	OK			OK
HP	Deskjet 3000		OK		OK	OK
HP	Deskjet 3050	USB2.0	OK			OK
HP	Deskjet 3325	USB	OK		OK	OK
HP	DeskJet 3420	USB	OK		OK	OK
HP	Deskjet 3520	USB	OK		OK	OK
HP	Deskjet 3535		OK		OK	OK
HP	Deskjet 3650		OK		OK	OK
HP	Deskjet 3743		OK		OK	OK
HP	Deskjet 3748	USB	OK		OK	OK
HP	Deskjet 3820	USB2.0/Parallel	OK	OK	OK	OK
HP	DeskJet 3920		OK		OK	OK
HP	DeskJet 3940		OK		OK	OK
HP	DeskJet 400/420	Parallel		OK		
HP	Deskjet 450C		OK	OK	OK	OK
HP	DeskJet 5440		OK		OK	OK
HP	DeskJet 5500	Parallel		OK		
HP	Deskjet 5550	USB/Parallel	OK	OK	OK	OK
HP	Deskjet 5652	USB/Parallel	OK	OK	OK	OK
HP	Deskjet 670C	Parallel(PCL3)		OK		
HP	Deskjet 680C	Parallel		OK		

HP	Deskjet 720C	Parallel		OK		
HP	Deskjet 810C	USB2.0/Parallel(PCL3)	OK	OK	OK	OK
HP	Deskjet 830C		OK	OK	OK	OK
HP	Deskjet 845C	USB(PCL3)	OK		OK	OK
HP	DeskJet 9300	USB/Parallel(PCL3)	OK	OK	OK	OK
HP	Deskjet 948c	Parallel/USB	OK	OK	OK	OK
HP	Deskjet 9600		OK	OK	OK	OK
HP	Deskjet 9650	USB/Parallel(PCL3)	OK	OK	OK	OK
HP	Deskjet 970c XI	Parallel/USB(PCL3)	OK	OK	OK	OK
HP	Deskjet 9800	USB/Parallel	OK	OK	OK	OK
HP	Deskjet D1560	USB	OK		OK	OK
HP	Deskjet D2560	USB	OK		OK	OK
HP	Deskjet D5560	USB	OK		OK	OK
HP	DeskJet F370	USB	OK		OK	OK
HP	DeskJet F380	USB	OK		OK	OK
HP	DeskJet F4185	USB	OK		OK	OK
HP	DeskJet F4280	USB	OK		OK	OK
HP	Deskjet F4480	USB	OK		OK	OK
HP	Laserjet M1005 MFP		OK		OK	OK
HP	LaserJet 1022	USB(GDI)	OK		OK	OK
HP	LaserJet 1022N		OK		OK	OK
HP	Laserjet 1100	Parallel		OK		
HP	Laserjet 1010	USB	OK			
HP	LaserJet 1160	USB(PCL5e/GDI)	OK	OK	OK	OK
HP	LaserJet 1200	USB/Parallel (PCL6/5e)	OK	OK	OK	OK
HP	LaserJet 1220		OK	OK	OK	OK
HP	Laserjet 1300	USB/Parallel(PCL6/5e)	OK	OK	OK	OK
HP	Laserjet 1320	USB/Parallel(PCL6/5e)	OK	OK	OK	OK
HP	Laserjet M1522n MFP		OK			OK

HP	LaserJet 2100	Parallel (PCL6)		OK		
HP	Laserjet 2200d	USB/Parallel	OK	OK	OK	OK
HP	Laserjet 2300	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
HP	LaserJet 2410	PCL6/5E(USB)	OK	OK	OK	OK
HP	LaserJet 2420	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
HP	LaserJet 2550		OK	OK	OK	OK
HP	LaserJet 3015	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
HP	LaserJet 3050	USB(PCL6/PCL5E)	OK		OK	OK
HP	LaserJet 3055		OK		OK	OK
HP	Laserjet 3200	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
HP	Laserjet 3330		OK	OK	OK	OK
HP	LaserJet 3330mfp	USB/Parallel (PCL6/5E)	OK	OK	OK	OK
HP	LaserJet 3380	USB/Parallel (PCL6/5E)	OK		OK	OK
HP	Laserjet 4000	Parallel(B.C)		OK		
HP	LaserJet 4050	Parallel(PCL6/5e)		OK		
HP	Laserjet 4100 /4100n	Parallel (PCL6/5E)		OK		
HP	LaserJet 4250	USB/Parallel(PCL6/5E)	OK	OK	OK	OK
HP	Laserjet 4300n	Parallel (PCL6/5E)		OK		
HP	Laserjet 4300tn/dtn	Parallel (PCL6/5E)		OK		
HP	Laserjet 4500	Parallel		OK		
HP	Laserjet 4650		OK	OK	OK	OK
HP	Laserjet 5100fn/tn	Parallel (PCL6/5E)		OK		
HP	Laserjet 5100le/se	Parallel (PCL6/5E)		OK		
HP	Laserjet 6P / 6L	Parallel		OK		
HP	Laserjet 8100	Parallel		OK		
HP	Laserjet M1005		OK		OK	OK
HP	Laserjet M1005 MFP		OK		OK	OK
HP	Laserjet M1120 MFP		OK		OK	OK
HP	LaserJet M1319F MFP	USB	OK		OK	OK

HP	LaserJet P2015	USB(PCL6/5e/PS Level 3	OK		OK	OK
HP	Officejet J3608	USB	OK		OK	OK
HP	OfficeJet 4255	USB	OK		OK	OK
HP	OfficeJet 4255	USB	OK		OK	OK
HP	Officejet 4500		OK			OK
HP	Officejet 4610	USB	OK		OK	OK
HP	Officejet 4620	USB	OK		OK	OK
HP	OfficeJet 5610	USB	OK		OK	OK
HP	Officejet J5780	USB	OK		OK	OK
HP	OfficeJet 6210	USB	OK		OK	OK
HP	OfficeJet 6310	USB	OK		OK	OK
HP	Officejet 6000	USB	OK		OK	OK
HP	Officejet 6100 ePrint	USB	OK		OK	OK
HP	Officejet 6500	USB	OK		OK	OK
HP	Officejet 6600	USB	OK		OK	OK
HP	Officejet 7000	USB			OK	OK
HP	Officejet 7500A	USB2.0	OK			OK
HP	OfficeJet 7210	USB	OK		OK	OK
HP	OfficeJet J4580	USB	OK		OK	OK
HP	Officejet J4660		OK			OK
HP	Officejet J6480	USB	OK		OK	OK
HP	Officejet K7100	USB	OK		OK	OK
HP	OfficeJet K850	USB	OK	OK	OK	OK
HP	OfficeJet Pro K5300	USB	OK		OK	OK
HP	OfficeJet Pro K550	USB	OK		OK	OK
HP	OfficeJet Pro K8600	USB	OK		OK	OK
HP	Officejet Pro L7380	USB	OK		OK	OK
HP	Officejet Pro L7590	USB	OK		OK	OK
HP	Officejet Pro 6500A Plus	USB2.0	OK			OK


 
 
 
 
 
 

 
 
 
 
 
 



HP	Officejet Pro 7000	USB	OK		OK	OK
HP	Officejet Pro 8000	USB	OK		OK	OK
HP	Officejet Pro 8100	USB2.0	OK			OK
HP	Officejet Pro 8500A Plus	USB2.0	OK			OK
HP	Officejet Pro 8500W	USB	OK		OK	OK
HP	Officejet Pro 8600	USB2.0	OK			OK
HP	Officejet Pro 8600 Plus	USB2.0	OK			OK
HP	Photosmart 2610	USB	OK		OK	OK
HP	Photosmart 3110	USB	OK		OK	OK
HP	Photosmart 5510	USB2.0	OK			OK
HP	Photosmart 5520	USB	OK		OK	OK
HP	Photosmart 6510	USB2.0	OK			OK
HP	Photosmart 7150	USB2.0	OK		OK	OK
HP	Photosmart 7200	USB	OK		OK	OK
HP	Photosmart 7510	USB2.0	OK			OK
HP	Photosmart 7550	USB 2.0 · Parallel	OK		OK	OK
HP	Photosmart 7660	USB(PCL3)	OK		OK	OK
HP	Photosmart 7830	USB	OK		OK	OK
HP	Photosmart 7900	USB	OK		OK	OK
HP	Photosmart 8200	USB	OK		OK	OK
HP	Photosmart Plus B209a	USB	OK		OK	OK
HP	Photosmart Plus B210a	USB	OK		OK	OK
HP	Photosmart Plus C310a	USB	OK		OK	OK
HP	Photosmart A520		OK		OK	OK
HP	Photosmart B109a		OK			OK
HP	Photosmart B110a AIO		OK			OK
HP	Photosmart C309a		OK		OK	OK
HP	Photosmart C410a	USB2.0	OK			OK
HP	Photosmart C3180	USB	OK		OK	OK

HP	Photosmart C4180	USB	OK		OK	OK
HP	Photosmart C4280	USB	OK		OK	OK
HP	Photosmart C4385	USB	OK		OK	OK
HP	Photosmart C4480	USB	OK		OK	OK
HP	Photosmart C4580	USB	OK		OK	OK
HP	Photosmart C5180	USB	OK		OK	OK
HP	Photosmart C5280	USB	OK		OK	OK
HP	Photosmart C5380	USB	OK		OK	OK
HP	Photosmart C6180	USB	OK		OK	OK
HP	Photosmart C6280	USB	OK		OK	OK
HP	Photosmart C6380	USB	OK		OK	OK
HP	Photosmart C7180	USB	OK		OK	OK
HP	Photosmart C7280	USB	OK		OK	OK
HP	Photosmart C8180	USB	OK			OK
HP	Photosmart D5160	USB	OK		OK	OK
HP	Photosmart D5360	USB	OK		OK	OK
HP	Photosmart D5460	USB	OK		OK	OK
HP	Photosmart D7160	USB	OK		OK	OK
HP	Photosmart D7260	USB	OK		OK	OK
HP	Photosmart D7360	USB	OK		OK	OK
HP	Photosmart Premium C309g	USB	OK			OK
HP	Photosmart Premium C310g	USB	OK			OK
HP	PSC 1210	USB 2.0			OK	OK
HP	PSC 1315	USB	OK		OK	OK
HP	PSC 1350	USB (LIDIL)	OK		OK	OK
HP	PSC 1410	USB	OK		OK	OK
HP	PSC 1610	USB	OK		OK	OK
HP	PSC 2210	USB	OK		OK	OK
HP	PSC 2310	USB	OK		OK	OK

EPSON	Aculaser C1100SE		OK	OK	OK	OK
EPSON	Aculaser C1600		OK			OK
EPSON	Aculaser C1700	USB	OK		OK	OK
EPSON	Aculaser C1750N	USB	OK		OK	OK
EPSON	Aculaser C1750W	USB	OK		OK	OK
EPSON	Aculaser C1900	USB/Parallel	OK	OK	OK	OK
EPSON	Aculaser C2900	USB	OK		OK	OK
EPSON	Aculaser C3800	USB	OK		OK	OK
EPSON	Aculaser C3900N	USB	OK		OK	OK
EPSON	Aculaser C9100		OK		OK	OK
EPSON	Aculaser CX16NF	USB	OK		OK	OK
EPSON	Aculaser CX17NF	USB	OK		OK	OK
EPSON	Aculaser M1400	USB	OK		OK	OK
EPSON	Aculaser M2010DN		OK		OK	OK
EPSON	Aculaser M2010D		OK	OK	OK	OK
EPSON	Aculaser M2310D	USB/Parallel	OK	OK	OK	OK
EPSON	Aculaser M2310DN	USB	OK		OK	OK
EPSON	Aculaser M2410D	USB/Parallel	OK	OK	OK	OK
EPSON	Aculaser M2410DN	USB	OK		OK	OK
EPSON	Aculaser MX14	USB	OK		OK	OK
EPSON	Aculaser MX14NF	USB	OK		OK	OK
EPSON	AL-M7000	USB	OK		OK	OK
EPSON	B-508DN		OK		OK	OK
EPSON	B-518DN		OK			OK
EPSON	C750		OK	OK	OK	OK
EPSON	CC-500L		OK		OK	OK
EPSON	CL-760		OK		OK	OK
EPSON	E-300L		OK		OK	OK
EPSON	E-520		OK		OK	OK

EPSON	E-720		OK		OK	OK
EPSON	EC-01		OK		OK	OK
EPSON	EPL 5700	Parallel		OK		
EPSON	EPL 5700	Parallel (ESC/Pages)		OK		
EPSON	EPL 5800		OK	OK	OK	OK
EPSON	EPL 5800	USB/Parallel (PCL6/5e)	OK	OK	OK	OK
EPSON	EPL 5900	USB/Parallel	OK	OK	OK	OK
EPSON	EPL 6100	USB/Parallel (PCL6/5e)	OK	OK	OK	OK
EPSON	EPL 6200	USB/Parallel	OK	OK	OK	OK
EPSON	EPL N2120	Parallel		OK		
EPSON	K100	USB	OK		OK	OK
EPSON	L200	USB	OK		OK	OK
EPSON	L300	USB	OK		OK	OK
EPSON	L800	USB	OK		OK	OK
EPSON	LP2500		OK		OK	OK
EPSON	LP-7700		OK		OK	OK
EPSON	LP-8700		OK		OK	OK
EPSON	LP-8800C		OK		OK	OK
EPSON	LP8900		OK		OK	OK
EPSON	LP-9500C		OK		OK	OK
EPSON	LQ 100	Parallel		OK		
EPSON	LQ 1000C	Parallel		OK		
EPSON	LQ 1170+	Parallel		OK		
EPSON	LQ 1170C	Parallel		OK		
EPSON	LQ 1170C+	Parallel		OK		
EPSON	LQ 2070C	Parallel		OK		
EPSON	LQ 2080C	Parallel		OK		
EPSON	LQ 2090	Parallel		OK		
EPSON	LQ 2090C		OK	OK	OK	OK

EPSON	LQ 2170C	Parallel(ESC/P)		OK		
EPSON	LQ 2180C			OK		
EPSON	LQ 2190C	Parallel/USB	OK	OK	OK	OK
EPSON	LQ 2550			OK		
EPSON	LQ 300	Parallel(ESC/P)		OK		
EPSON	LQ 300+			OK		
EPSON	LQ 300+II		OK	OK	OK	OK
EPSON	LQ 3500C	Parallel		OK		
EPSON	LQ 570C	Parallel		OK		
EPSON	LQ 670	Parallel		OK		
EPSON	LQ 680	Parallel(ESC/P)		OK		
EPSON	LQ 680C	Parallel		OK		
EPSON	ME 320		OK		OK	OK
EPSON	ME 340	USB	OK		OK	OK
EPSON	ME Office 82WD	USB	OK		OK	OK
EPSON	ME Office 900WD	USB	OK		OK	OK
EPSON	ME Office 940FW	USB	OK		OK	OK
EPSON	ME Office 960FWD	USB	OK		OK	OK
EPSON	MC-2000		OK		OK	OK
EPSON	PictureMate PM250		OK		OK	OK
EPSON	PLQ-20C		OK		OK	OK
EPSON	PLQ-20CM		OK		OK	OK
EPSON	PM-860PT		OK		OK	OK
EPSON	PM-890C		OK		OK	OK
EPSON	PM-920C		OK		OK	OK
EPSON	PM-930C		OK		OK	OK
EPSON	PM-950C		OK		OK	OK
EPSON	PM-970C		OK		OK	OK
EPSON	PM-980C		OK		OK	OK

EPSON	PM-A550		OK		OK	OK
EPSON	PM-A620		OK		OK	OK
EPSON	PM-A650		OK		OK	OK
EPSON	PM-A720		OK		OK	OK
EPSON	PM-A820		OK		OK	OK
EPSON	PM-A840		OK		OK	OK
EPSON	PM-A850		OK		OK	OK
EPSON	PM-A890		OK		OK	OK
EPSON	PM-A900		OK		OK	OK
EPSON	PM-A920		OK		OK	OK
EPSON	PM-A940		OK		OK	OK
EPSON	PM-A950		OK		OK	OK
EPSON	PM-A970		OK		OK	OK
EPSON	PM-2200C		OK		OK	OK
EPSON	PM-3500C		OK		OK	OK
EPSON	PM-3700C		OK		OK	OK
EPSON	PM-4000PX		OK		OK	OK
EPSON	PM-D800		OK		OK	OK
EPSON	PM-D870		OK		OK	OK
EPSON	PM-D1000		OK		OK	OK
EPSON	PM-FA700		OK		OK	OK
EPSON	PM-G800		OK		OK	OK
EPSON	PM-G820		OK		OK	OK
EPSON	PM-G850		OK		OK	OK
EPSON	PM-G860		OK		OK	OK
EPSON	PM-G4500		OK		OK	OK
EPSON	PM-T960		OK		OK	OK
EPSON	PM-T990		OK		OK	OK
EPSON	PX-5000		OK		OK	OK

EPSON	PX-A640		OK		OK	OK
EPSON	PX-A740		OK		OK	OK
EPSON	PX-G5300		OK		OK	OK
EPSON	PX-G5100		OK		OK	OK
EPSON	PX-G930		OK		OK	OK
EPSON	PX-G5000		OK		OK	OK
EPSON	PX-V780		OK		OK	OK
EPSON	RX 510		OK		OK	OK
EPSON	RX 530		OK		OK	OK
EPSON	RX 590		OK		OK	OK
EPSON	RX 630		OK		OK	OK
EPSON	RX 690		OK		OK	OK
EPSON	Stylus C20		OK		OK	OK
EPSON	Stylus C40		OK		OK	OK
EPSON	Stylus C41UX/SX	USB	OK		OK	OK
EPSON	Stylus C43UX		OK		OK	OK
EPSON	Stylus C45		OK		OK	OK
EPSON	Stylus C59		OK		OK	OK
EPSON	Stylus C60	USB/Parallel	OK	OK	OK	OK
EPSON	Stylus C63		OK	OK	OK	OK
EPSON	Stylus C67		OK	OK	OK	OK
EPSON	Stylus C79		OK		OK	OK
EPSON	Stylus C83	Parallel		OK		
EPSON	Stylus C90		OK		OK	OK
EPSON	Stylus Color 1160	USB/Parallel	OK		OK	OK
EPSON	Stylus Color 1500		OK		OK	OK
EPSON	Stylus Color 1520		OK		OK	OK
EPSON	Stylus Color 400	Parallel		OK		
EPSON	Stylus Color 600	Parallel		OK		

EPSON	Stylus Color 670	USB/Parallel (ESC/P)	OK	OK	OK	OK
EPSON	Stylus Color 800	Parallel (ESC/P2)	OK	OK	OK	OK
EPSON	Stylus Color 810		OK	OK	OK	OK
EPSON	Stylus Color 850	Parallel (ESC/P2)	OK	OK	OK	OK
EPSON	Stylus Color 900	USB/Parallel (ESC/P2)	OK		OK	OK
EPSON	Stylus CX-1500		OK		OK	OK
EPSON	Stylus CX-2900		OK		OK	OK
EPSON	Stylus CX-3500		OK		OK	OK
EPSON	Stylus CX-3700		OK		OK	OK
EPSON	Stylus CX-3900		OK		OK	OK
EPSON	Stylus CX-4100		OK		OK	OK
EPSON	Stylus CX-4700		OK		OK	OK
EPSON	Stylus CX-4900		OK		OK	OK
EPSON	Stylus CX-5300		OK		OK	OK
EPSON	Stylus CX-5500		OK		OK	OK
EPSON	Stylus CX-5505		OK		OK	OK
EPSON	Stylus CX-5900		OK		OK	OK
EPSON	Stylus CX-6900F		OK		OK	OK
EPSON	Stylus CX-7300		OK		OK	OK
EPSON	Stylus CX-7800		OK		OK	OK
EPSON	Stylus CX-8300		OK		OK	OK
EPSON	Stylus CX-9300F		OK		OK	OK
EPSON	Stylus Office T30		OK		OK	OK
EPSON	Stylus Office T40W	USB	OK		OK	OK
EPSON	Stylus Office TX300F		OK		OK	OK
EPSON	Stylus Office TX320F	USB	OK		OK	OK
EPSON	Stylus Office TX510FN	USB	OK		OK	OK
EPSON	Stylus Office TX600FW		OK		OK	OK
EPSON	Stylus Office TX610FW	USB	OK		OK	OK

EPSON	Stylus Office T1100	USB	OK		OK	OK
EPSON	Stylus Photo 915		OK		OK	OK
EPSON	Stylus Photo 1270	USB/Parallel	OK	OK	OK	OK
EPSON	Stylus Photo 1290	USB/Parallel	OK		OK	OK
EPSON	Stylus Photo 1390		OK		OK	OK
EPSON	Stylus Photo 2100		OK		OK	OK
EPSON	Stylus Photo 710	USB/Parallel	OK		OK	OK
EPSON	Stylus Photo 720	USB/Parallel	OK		OK	OK
EPSON	Stylus Photo 790		OK		OK	OK
EPSON	Stylus Photo 810		OK	OK	OK	OK
EPSON	Stylus Photo 830U		OK		OK	OK
EPSON	Stylus Photo 900		OK	OK	OK	OK
EPSON	Stylus Photo 915		OK		OK	OK
EPSON	Stylus Photo EX2	Parallel	OK	OK	OK	OK
EPSON	Stylus Photo EX3	Parallel/USB1.1	OK	OK	OK	OK
EPSON	Stylus Photo R1800		OK	OK	OK	OK
EPSON	Stylus Photo R210	USB1.1	OK		OK	OK
EPSON	Stylus Photo R230	USB	OK		OK	OK
EPSON	Stylus Photo R250	USB	OK		OK	OK
EPSON	Stylus Photo R270	ESC/P(USB)	OK		OK	OK
EPSON	Stylus Photo R310	USB2.0	OK		OK	OK
EPSON	Stylus Photo R350		OK		OK	OK
EPSON	Stylus Photo R2400	USB	OK		OK	OK
EPSON	Stylus Photo R800		OK		OK	OK
EPSON	Stylus Photo RX430	USB	OK		OK	OK
EPSON	Stylus Photo RX 510		OK		OK	OK
EPSON	Stylus Photo RX 530		OK		OK	OK
EPSON	Stylus Photo RX 590		OK		OK	OK
EPSON	Stylus Photo RX 630		OK		OK	OK

EPSON	Stylus Photo RX 650		OK		OK	OK
EPSON	Stylus Photo RX 690		OK		OK	OK
EPSON	Stylus Photo R2880		OK		OK	OK
EPSON	Stylus Photo TX700W	USB	OK		OK	OK
EPSON	Stylus Photo TX800FW	USB	OK		OK	OK
EPSON	Stylus Photo TX820FWD	USB	OK		OK	OK
EPSON	Stylus Pro 7600	USB/Parallel	OK	OK	OK	OK
EPSON	Stylus TX550W	USB	OK		OK	OK
EPSON	Stylus TX420W		OK			OK
EPSON	Stylus TX410	USB	OK		OK	OK
EPSON	Stylus TX430	USB	OK		OK	OK
EPSON	Stylus TX235	USB	OK		OK	OK
EPSON	Stylus TX220		OK			OK
EPSON	Stylus TX200	USB	OK		OK	OK
EPSON	Stylus TX210	USB	OK		OK	OK
EPSON	Stylus TX130	USB	OK		OK	OK
EPSON	Stylus TX110	USB	OK		OK	OK
EPSON	Stylus TX100	USB	OK		OK	OK
EPSON	Stylus T22		OK			OK
EPSON	Stylus T20	USB	OK		OK	OK
EPSON	Stylus T21	USB	OK		OK	OK
EPSON	Stylus Photo T50	USB	OK		OK	OK
EPSON	TM883 (III)	Parallel		OK		
EPSON	TM T88III	Parallel		OK		
EPSON	WF-7011	USB	OK		OK	OK
EPSON	WP-4531	USB	OK			OK
EPSON	WP-4091	USB	OK			OK
EPSON	XP30	USB	OK		OK	OK
EPSON	XP-102	USB	OK		OK	OK

EPSON	XP-202	USB	OK		OK	OK
EPSON	XP-302	USB	OK		OK	OK
EPSON	XP-402	USB	OK		OK	OK
Canon	BJ-330	Parallel		OK		
Canon	BJC-4200	Parallel		OK		
Canon	BJC-4300	Parallel		OK		
Canon	BJC-4500	Parallel				
Canon	BJC-4550	Parallel		OK		
Canon	BJC-4600	Parallel		OK		
Canon	BJF9000		OK		OK	OK
Canon	D380		OK		OK	OK
Canon	I-255		OK		OK	OK
Canon	I-355		OK		OK	OK
Canon	I-450		OK		OK	OK
Canon	I-455		OK		OK	OK
Canon	I-470D		OK		OK	OK
Canon	I-475D		OK		OK	OK
Canon	I-550		OK		OK	OK
Canon	I-560		OK		OK	OK
Canon	I-850	IEEE 1284/USB	OK		OK	OK
Canon	I-865		OK		OK	OK
Canon	I-950	USB 2.0	OK		OK	OK
Canon	I-6100		OK	OK	OK	OK
Canon	I-6500		OK	OK	OK	OK
Canon	I-9100		OK		OK	OK
Canon	I-9950		OK		OK	OK
Canon	IX4000		OK		OK	OK
Canon	IX5000		OK		OK	OK
Canon	Imageclass D380		OK		OK	OK

Canon	MP-160		OK		OK	OK
Canon	MP-638		OK		OK	OK
Canon	MP 770		OK		OK	OK
Canon	MX318		OK		OK	OK
Canon	MX320		OK		OK	OK
Canon	MX700		OK		OK	OK
Canon	PIXUS IP2500		OK		OK	OK
Canon	PIXUS 990i		OK		OK	OK
Canon	PIXMA iP1000	USB1.1	OK		OK	OK
Canon	PIXMA iP1700		OK		OK	OK
Canon	PIXMA iP1800		OK		OK	OK
Canon	PIXMA Ip1880	USB	OK		OK	OK
Canon	PIXMA Ip1980		OK			OK
Canon	PIXMA Ip2000		OK		OK	OK
Canon	PIXMA iP3000	USB 2.0	OK		OK	OK
Canon	PIXMA Ip3300		OK		OK	OK
Canon	PIXMA Ip3500	USB	OK		OK	OK
Canon	PIXMA Ip3680	USB	OK			OK
Canon	PIXMA iP4000	USB1.1/IEEE1284	OK	OK	OK	OK
Canon	PIXMA Ip4200		OK		OK	OK
Canon	PIXMA Ip4300		OK		OK	OK
Canon	PIXMA Ip4500		OK		OK	OK
Canon	PIXMA Ip4760		OK			OK
Canon	PIXMA Ip4970	USB2.0	OK			OK
Canon	PIXMA Ip5000		OK		OK	OK
Canon	PIXMA Ip6000		OK		OK	OK
Canon	PIXMA Ip8500		OK		OK	OK
Canon	PIXMA MG6170	USB2.0	OK			OK
Canon	PIXMA MG6270	USB2.0	OK			OK

Canon	PIXMA MP110	USB	OK		OK	OK
Canon	PIXMA MP130		OK		OK	OK
Canon	PIXMA MP145		OK		OK	OK
Canon	PIXMA MP150	USB 2.0 (GDI)	OK		OK	OK
Canon	PIXMA MP180		OK		OK	OK
Canon	PIXMA MP258	USB	OK			OK
Canon	PIXMA MP450		OK		OK	OK
Canon	PIXMA MP730		OK		OK	OK
Canon	PIXMA MP780		OK		OK	OK
Canon	PIXMA MP830		OK		OK	OK
Canon	PIXMA MX357		OK			OK
Canon	PIXMA MX416	USB2.0	OK			OK
Canon	S-200SPX		OK		OK	OK
Canon	S-520	Parallel/USB		OK		
Lexmark	C720	Parallel		OK		
Lexmark	E230	Parallel/USB2.0	OK		OK	OK
Lexmark	E322	USB	OK	OK	OK	OK
Lexmark	Optra S1250	Parallel		OK		
Lexmark	P4350		OK		OK	OK
Lexmark	P6250		OK		OK	OK
Lexmark	T420		OK	OK	OK	OK
Lexmark	T620		OK	OK	OK	OK
Lexmark	W812	USB1.1/Parallel	OK	OK	OK	OK
Lexmark	Z42		OK		OK	OK
Lexmark	Z43	USB	OK	OK	OK	OK
Lexmark	Z45	USB	OK		OK	OK
Lexmark	Z55		OK	OK	OK	OK
Lexmark	Z515		OK	OK	OK	OK
Lexmark	Z615	USB1.1	OK		OK	OK

Lexmark	Z705		OK	OK	OK	OK
FUJI Xerox	Able 3321	Parallel		OK		
FUJI Xerox	DL700	Parallel		OK		
FUJI Xerox	DL900	Parallel		OK		
FUJI Xerox	DL-3400	Parallel		OK		
FUJI Xerox	DL-3800	Parallel		OK		
FUJI Xerox	DL-3850	Parallel		OK		
FUJI Xerox	DL-5800	Parallel		OK		
FUJI Xerox	DL-6400Pro	Parallel		OK		
FUJI Xerox	DL-6800	Parallel		OK		
FUJI Xerox	DocuPrint 2050	GDI(USB/Parallel)ok	OK	OK	OK	OK
FUJI Xerox	DocuPrint 240A		OK	OK	OK	OK
FUJI Xerox	DocuPrint C1110B		OK		OK	OK
FUJI Xerox	DocuPrint CM205 f	USB	OK		OK	OK
FUJI Xerox	DocuPrint CP105 b	USB	OK		OK	OK
FUJI Xerox	DocuPrint P205 b	USB2.0	OK			OK
FUJI Xerox	DocuPrint M205 b	USB	OK		OK	OK
FUJI Xerox	DocuPrint M205 f	USB	OK		OK	OK
FUJI Xerox	DocuPrint M205 fw	USB	OK		OK	OK
FUJI Xerox	FP 410			OK		
FUJI Xerox	Jet Wind 500C	Parallel		OK		
FUJI Xerox	Phaser 3310		OK	OK	OK	OK
FUJI Xerox	PP 10	Parallel		OK		
Konica Minolta	Di 152	PCL-5		OK		
Konica Minolta	Di 200/Di 250/Di 251	PCL-5		OK		

Konica Minolta	magicolor 2450	USB (PCL-5)	OK	OK	OK	OK
Konica Minolta	magicolor 5450	USB/Parallel (PCL-5)	OK	OK	OK	OK
Konica Minolta	magicolor 7300		OK		OK	OK
Konica Minolta	Magicolor 7300	IEEE1284/USB1.1	OK		OK	OK
Konica Minolta	PagePro 1350W		OK			OK
Konica Minolta	PagePro 9100	IEEE1284/USB1.1	OK		OK	OK
Samsung	CLP-315		OK			OK
Samsung	CLP-500	(SPL)	OK	OK	OK	OK
Samsung	CLP-510		OK	OK	OK	OK
Samsung	CLP-620ND		OK			OK
Samsung	CLX2160	USB	OK		OK	OK
Samsung	ML-1510/1710	(SPL)	OK	OK	OK	OK
Samsung	ML-1520		OK		OK	OK
Samsung	ML-1660		OK			OK
Samsung	ML-1710		OK		OK	OK
Samsung	ML-1750	IEEE1284/USB(PCL6)	OK	OK	OK	OK
Samsung	ML-1915	USB	OK		OK	OK
Samsung	ML-2010	SPL(USB)	OK		OK	OK
Samsung	ML-2250		OK	OK	OK	OK
Samsung	ML-2550		OK	OK	OK	OK
Samsung	ML-2580N		OK			OK
Samsung	ML-3471ND		OK	OK		OK

Samsung	SCX-4016		OK	OK	OK	OK
Samsung	SCX-4100/4106/4116/4216F	IEEE-1284/USB(SPL)	OK	OK	OK	OK
Samsung	SRP 270			OK		
Panasonic	KX-P1121	Parallel		OK		
Panasonic	KX-P1123	Parallel		OK		
Panasonic	KX-P1124	Parallel		OK		
Panasonic	KX-P1624	Parallel		OK		
Panasonic	KX-P6500	Parallel		OK		
TOSHIBA	E-161		OK(Parallel only)	OK	OK	OK
TOSHIBA	Estudio-25	Parallel		OK		
NEC	NEC P2200	Parallel		OK		
NEC	NEC P3200	Parallel		OK		
NEC	NEC P5300	Parallel		OK		
NEC	NEC P8000	Parallel		OK		
IBM	IBM Infoprint 20	IEEE 1284 Parallel		OK		
IBM	Infoprint 1116		OK	OK	OK	OK
IBM	Infoprint 1312		OK	OK	OK	OK
IBM	Infoprint 1316		OK	OK	OK	OK
IBM	Infoprint 1332		OK	OK	OK	OK
IBM	Infoprint 1412		OK	OK	OK	OK
Star	NX-2420	Parallel		OK		
Sharp	AR-255			OK(Parallel only)		
Sharp	AR-265FG			OK(Parallel only)		
Sharp	AR-M160(AR-NB2)	IEEE 1284, USB 2.0		OK(Parallel only)		
Sharp	AR-M205	IEEE 1284, USB 2.0		OK(Parallel only)		

Sharp	AR-M207			OK(Parallel only)		
Sharp	AR-M209	IEEE 1284, USB 2.0				
Sharp	AR-M235			OK(Parallel only)		
Sharp	AR-M236	IEEE 1284, USB 2.0				
Sharp	AR-M275			OK(Parallel only)		
Sharp	AR-M276	IEEE 1284, USB2.0				
Sharp	AR-M350			OK(Parallel only)		
Sharp	AR-M400			OK(Parallel only)		
Sharp	AR-M450			OK(Parallel only)		
RICOH	NF3570			OK		
Brother	MFC 4800		OK	OK	OK	OK
Brother	MFC 4800J		OK	OK	OK	OK
Brother	MFC 6800		OK	OK	OK	OK
Brother	MFC 7220	GDI(USB/Parallel)	OK	OK	OK	OK
Brother	MFC 7420	GDI(USB/Parallel)	OK	OK	OK	OK
Brother	MFC 7820N		OK	OK	OK	OK
Brother	MFC 8840D		OK	OK	OK	OK
Brother	MFC 210C		OK		OK	OK
Brother	MFC 240C		OK		OK	OK
Brother	DCP-7030	USB2.0	OK			OK
Brother	HL1260			OK		
Brother	HL-2040	PCL6(USB,Parallel)				
Brother	HL-2140		OK			OK
Brother	HL-2170W	USB	OK		OK	OK

Brother	IntelliFax 2820		OK		OK	OK
其它	震旦AD-166数码复合机	USB(GDI)				
其它	震旦AD-216数码复合机	USB口使用1101U(GDI)				
其它	震旦AD-226数码复合机	USB(GDI)				
其它	DELL 1100	Parallel/USB(GDI)				
其它	中崎AB-80K (票据)					
其它	OKI 5530	Parallel				
其它	OKI Microline 391			OK		
其它	OKI B4350		OK	OK	OK	OK
其它	吉成5890热敏打印机	Parallel				
其它	MITAC	MP-6600C		OK		
其它	BENQ CM3000		OK		OK	OK
Avision	MF 3200		OK		OK	OK
	MF 3230		OK		OK	OK
Citizen	GSX230			OK		
DATAMAX	I-4208			OK		
	I-4308			OK		
DOCUJET	1610F		OK	OK	OK	OK
	UA1610		OK	OK	OK	OK
FUTEK	F8000			OK		
	F84+			OK		
	F86+			OK		
Kyocera	FS-1010		OK	OK	OK	OK
	FS-1010KX		OK		OK	OK
	FS-1020		OK	OK	OK	OK
	FS-1920		OK	OK	OK	OK
	FS-2000D		OK	OK	OK	OK
	FS-820		OK	OK	OK	OK
	FS-920		OK	OK	OK	OK
	FS-6020		OK	OK	OK	OK

	FS-6026		OK	OK	OK	OK
--	---------	--	----	----	----	----

Last Update:08.08.2012

New Added Model