



Printer's Brand	Printer's Type	GPSU21
<b>Avision</b>	<b>MF 3200</b>	•
<b>Avision</b>	<b>MF 3230</b>	•
<b>Brother</b>	<b>MFC4800</b>	•
<b>Brother</b>	<b>MFC4800J</b>	•
<b>Brother</b>	<b>MFC6800</b>	•
<b>Brother</b>	<b>MFC7220</b>	•
<b>Brother</b>	<b>MFC7420</b>	•
<b>Brother</b>	<b>MFC8840D</b>	•
<b>Brother</b>	<b>MFC210C</b>	•
<b>Brother</b>	<b>IntelliFax 2820</b>	•
<b>CANON</b>	<b>S200SPX</b>	•
<b>CANON</b>	<b>I450</b>	•
<b>CANON</b>	<b>I550</b>	•
<b>CANON</b>	<b>I850</b>	•
<b>CANON</b>	<b>I950</b>	•
<b>CANON</b>	<b>I255</b>	•
<b>CANON</b>	<b>I355</b>	•
<b>CANON</b>	<b>I455</b>	•
<b>CANON</b>	<b>I470D</b>	•
<b>CANON</b>	<b>I475D</b>	•
<b>CANON</b>	<b>I560</b>	•
<b>CANON</b>	<b>I850</b>	•
<b>CANON</b>	<b>I865</b>	•
<b>CANON</b>	<b>I6100</b>	•
<b>CANON</b>	<b>I6500</b>	•
<b>CANON</b>	<b>I9100</b>	•
<b>CANON</b>	<b>I9950</b>	•
<b>CANON</b>	<b>IX4000</b>	•
<b>CANON</b>	<b>IX5000</b>	•
<b>CANON</b>	<b>Imageclass D380</b>	•

<b>CANON</b>	<b>BJF9000</b>	•
<b>CANON</b>	<b>PIXMA ip1000</b>	•
<b>CANON</b>	<b>PIXMA ip1800</b>	•
<b>CANON</b>	<b>PIXMA ip2000</b>	•
<b>CANON</b>	<b>PIXMA ip3000</b>	•
<b>CANON</b>	<b>PIXMA ip3300</b>	•
<b>CANON</b>	<b>PIXMA ip3500</b>	•
<b>CANON</b>	<b>PIXMA ip4000</b>	•
<b>CANON</b>	<b>PIXMA ip4200</b>	•
<b>CANON</b>	<b>PIXMA ip4500</b>	•
<b>CANON</b>	<b>PIXMA ip5000</b>	•
<b>CANON</b>	<b>PIXMA ip6000</b>	•
<b>CANON</b>	<b>PIXMA ip8500</b>	•
<b>CANON</b>	<b>MP-110</b>	•
<b>CANON</b>	<b>MP-130</b>	•
<b>CANON</b>	<b>MP-150</b>	•
<b>CANON</b>	<b>MP-160</b>	•
<b>CANON</b>	<b>MP730</b>	•
<b>CANON</b>	<b>MP770</b>	•
<b>CANON</b>	<b>MX 318</b>	•
<b>CANON</b>	<b>MX 700</b>	•
<b>DOCUJET</b>	<b>1610F</b>	•
<b>DOCUJET</b>	<b>UA1610</b>	•
<b>EPSON</b>	<b>Aculaser C1900</b>	•
<b>EPSON</b>	<b>Aculaser C3800</b>	•
<b>EPSON</b>	<b>Aculaser C9100</b>	•
<b>EPSON</b>	<b>C750</b>	•
<b>EPSON</b>	<b>EC-01</b>	•
<b>EPSON</b>	<b>LQ-300+II</b>	•
<b>EPSON</b>	<b>LQ-2090C</b>	•
<b>EPSON</b>	<b>PictureMate PM250</b>	•
<b>EPSON</b>	<b>STYLUS C20</b>	•
<b>EPSON</b>	<b>STYLUS C40</b>	•
<b>EPSON</b>	<b>STYLUS C41UX</b>	•
<b>EPSON</b>	<b>STYLUS C43UX</b>	•
<b>EPSON</b>	<b>STYLUS C45</b>	•
<b>EPSON</b>	<b>STYLUS C59</b>	•
<b>EPSON</b>	<b>STYLUS C60</b>	•

EPSON	Stylus C63	•
EPSON	Stylus C67	•
EPSON	Stylus C79	•
EPSON	Stylus C90	•
EPSON	Stylus Color 670	•
EPSON	Stylus Color 800	•
EPSON	Stylus Color 810	•
EPSON	Stylus Color 850	•
EPSON	Stylus Color 900	•
EPSON	Stylus Color 1160	•
EPSON	Stylus Color 1520	•
EPSON	Stylus CX-1500	•
EPSON	Stylus CX-2900	•
EPSON	Stylus CX-3500	•
EPSON	Stylus CX-3700	•
EPSON	Stylus CX-3900	•
EPSON	Stylus CX-4100	•
EPSON	Stylus CX-4700	•
EPSON	Stylus CX-4900	•
EPSON	Stylus CX-5300	•
EPSON	Stylus CX-5500	•
EPSON	Stylus CX-5900	•
EPSON	Stylus CX-6900F	•
EPSON	Stylus CX-7300	•
EPSON	Stylus CX-7800	•
EPSON	Stylus CX-8300	•
EPSON	Stylus Office T30	•
EPSON	Stylus Office TX300F	•
EPSON	Stylus Office TX700W	•
EPSON	Stylus Pro 7600	•
EPSON	Stylus Photo 915	•
EPSON	Stylus Photo 1270	•
EPSON	Stylus Photo 1290	•
EPSON	Stylus Photo 1390	•
EPSON	Stylus Photo 2100	•
EPSON	Stylus Photo 710	•
EPSON	Stylus Photo 720	•
EPSON	Stylus Photo 790	•

<b>EPSON</b>	<b>Stylus Photo 810</b>	•
<b>EPSON</b>	<b>Stylus Photo 830U</b>	•
<b>EPSON</b>	<b>Stylus Photo 900</b>	•
<b>EPSON</b>	<b>Stylus Photo 915</b>	•
<b>EPSON</b>	<b>Stylus Photo EX2</b>	•
<b>EPSON</b>	<b>Stylus Photo EX3</b>	•
<b>EPSON</b>	<b>Stylus Photo TX600FW</b>	•
<b>EPSON</b>	<b>Stylus Photo TX800FW</b>	•
<b>EPSON</b>	<b>Stylus Photo R1800</b>	•
<b>EPSON</b>	<b>Stylus Photo R210</b>	•
<b>EPSON</b>	<b>Stylus Photo R230</b>	•
<b>EPSON</b>	<b>Stylus Photo R250</b>	•
<b>EPSON</b>	<b>Stylus Photo R270</b>	•
<b>EPSON</b>	<b>Stylus Photo R310</b>	•
<b>EPSON</b>	<b>Stylus Photo R350</b>	•
<b>EPSON</b>	<b>Stylus Photo R2400</b>	•
<b>EPSON</b>	<b>Stylus Photo RX 430</b>	•
<b>EPSON</b>	<b>Stylus Photo RX 510</b>	•
<b>EPSON</b>	<b>Stylus Photo RX 530</b>	•
<b>EPSON</b>	<b>Stylus Photo RX 590</b>	•
<b>EPSON</b>	<b>Stylus Photo RX 630</b>	•
<b>EPSON</b>	<b>Stylus Photo RX 650</b>	•
<b>EPSON</b>	<b>Stylus Photo RX 690</b>	•
<b>EPSON</b>	<b>T20</b>	•
<b>EPSON</b>	<b>T40W</b>	•
<b>EPSON</b>	<b>TX100</b>	•
<b>EPSON</b>	<b>TX200</b>	•
<b>EPSON</b>	<b>EPL5800</b>	•
<b>EPSON</b>	<b>EPL5900</b>	•
<b>EPSON</b>	<b>EPL6100</b>	•
<b>EPSON</b>	<b>EPL6200</b>	•
<b>EPSON</b>	<b>LP2500</b>	•
<b>EPSON</b>	<b>LP8900</b>	•
<b>HP</b>	<b>Color Laserjet 2605</b>	•
<b>HP</b>	<b>Color Laserjet 2700N</b>	•
<b>HP</b>	<b>Color Laserjet 3700</b>	•
<b>HP</b>	<b>DeskJet 450C</b>	•
<b>HP</b>	<b>DeskJet 810C</b>	•

HP	DeskJet 830C	•
HP	DeskJet 845C	•
HP	DeskJet 948C	•
HP	DeskJet 970CXI	•
HP	DeskJet 1125C	•
HP	DeskJet 1180C	•
HP	DeskJet 1220C	•
HP	DeskJet 1280	•
HP	DeskJet 3325	•
HP	DeskJet 3420	•
HP	DeskJet 3535	•
HP	DeskJet 3743	•
HP	DeskJet 3748	•
HP	DeskJet 3650	•
HP	DeskJet 3820	•
HP	DeskJet 3920	•
HP	DeskJet 3940	•
HP	DeskJet 5440	•
HP	DeskJet 5550	•
HP	DeskJet 5652	•
HP	DeskJet 9300	•
HP	DeskJet 9600	•
HP	DeskJet 9650	•
HP	DeskJet 9800	•
HP	Deskjet F4280	•
HP	DeskJet D2460	•
HP	Business Inkjet 1000	•
HP	Designjet 100	•
HP	LaserJet 1022	•
HP	LaserJet 1022N	•
HP	LaserJet 1160	•
HP	LaserJet 1200	•
HP	LaserJet 1220	•
HP	LaserJet 1300	•
HP	LaserJet 1320	•
HP	LaserJet 2200D	•
HP	LaserJet 2300	•
HP	LaserJet 2410	•

HP	LaserJet 2420	•
HP	LaserJet 2500	•
HP	LaserJet 2550	•
HP	LaserJet 3050	•
HP	LaserJet 3055	•
HP	LaserJet 3200	•
HP	LaserJet 3330	•
HP	LaserJet 3380	•
HP	LasetJet 4250	•
HP	LasetJet 4300	•
HP	LasetJet 4650	•
HP	LasetJet 5000	•
HP	LaserJet 1005 MFP	•
HP	Laserjet M1120 MFP	•
HP	Photosmart 2610	•
HP	Photosmart 7150	•
HP	Photosmart 7550	•
HP	Photosmart 7830	•
HP	Photosmart C3180	•
HP	Photosmart C4180	•
HP	Photosmart C4385	•
HP	Photosmart C4480	•
HP	Photosmart C7280	•
HP	Photosmart D5160	•
HP	Photosmart D7160	•
HP	Photosmart D7260	•
HP	PSC 1315	•
HP	PSC 1350	•
HP	PSC 1410	•
HP	PSC 1610	•
HP	PSC 2210	•
HP	PSC 2310	•
HP	OfficeJet 4255	•
HP	OfficeJet 5510	•
HP	OfficeJet 5610	•
HP	OfficeJet 6210	•
HP	Officejet 6310	•
HP	OfficeJet 7210	•

<b>HP</b>	<b>Officejet J4580</b>	•
<b>HP</b>	<b>Officejet K7100</b>	•
<b>HP</b>	<b>OfficeJet K850</b>	•
<b>HP</b>	<b>OfficeJet Pro K5300</b>	•
<b>HP</b>	<b>OfficeJet Pro K550</b>	•
<b>IBM</b>	<b>Infoprint 1116</b>	•
<b>IBM</b>	<b>Infoprint 1312</b>	•
<b>IBM</b>	<b>Infoprint 1316</b>	•
<b>IBM</b>	<b>Infoprint 1332</b>	•
<b>IBM</b>	<b>Infoprint 1412</b>	•
<b>Konica Minolta</b>	<b>Pagepro 9100</b>	•
<b>Konica Minolta</b>	<b>Magicolor 2450</b>	•
<b>Konica Minolta</b>	<b>Magicolor 5450</b>	•
<b>Konica Minolta</b>	<b>Magicolor 7300</b>	•
<b>Kyocera</b>	<b>FS-1010</b>	•
<b>Kyocera</b>	<b>FS-1010KX</b>	•
<b>Kyocera</b>	<b>FS-1020</b>	•
<b>Kyocera</b>	<b>FS-1920</b>	•
<b>Kyocera</b>	<b>FS-820</b>	•
<b>Kyocera</b>	<b>FS-920</b>	•
<b>Kyocera</b>	<b>FS-6020</b>	•
<b>LEXMARK</b>	<b>E230</b>	•
<b>LEXMARK</b>	<b>E322</b>	•
<b>LEXMARK</b>	<b>T420</b>	•
<b>LEXMARK</b>	<b>T620</b>	•
<b>LEXMARK</b>	<b>W812</b>	•
<b>LEXMARK</b>	<b>Z43</b>	•
<b>LEXMARK</b>	<b>Z45</b>	•
<b>LEXMARK</b>	<b>Z55</b>	•
<b>LEXMARK</b>	<b>Z615</b>	•
<b>LEXMARK</b>	<b>Z705</b>	•
<b>LEXMARK</b>	<b>Z42</b>	•
<b>LEXMARK</b>	<b>Z515</b>	•
<b>OKI</b>	<b>B4350</b>	•
<b>SAMSUNG</b>	<b>ML-1520</b>	•
<b>SAMSUNG</b>	<b>ML-1710</b>	•
<b>SAMSUNG</b>	<b>ML-1750</b>	•
<b>SAMSUNG</b>	<b>ML-2010</b>	•

<b>SAMSUNG</b>	<b>ML-2250</b>	•
<b>SAMSUNG</b>	<b>ML-2550</b>	•
<b>SAMSUNG</b>	<b>CLP 500</b>	•
<b>SAMSUNG</b>	<b>CLP 510</b>	•
<b>SAMSUNG</b>	<b>SCX-4016</b>	•
<b>SAMSUNG</b>	<b>SCX-4100</b>	•
<b>XEROX</b>	<b>Phaser 3310</b>	•
<b>XEROX</b>	<b>Docuprint 240A</b>	•